


Installation guide Defender chassis mounted storage box

Package content:

- 1x Storage box
- 2x Storage box locking pins
- 4x Mounting bolts
- 4x Locking nuts
- 4x Large washer
- 4x Small washer
- 2x Mounting plate

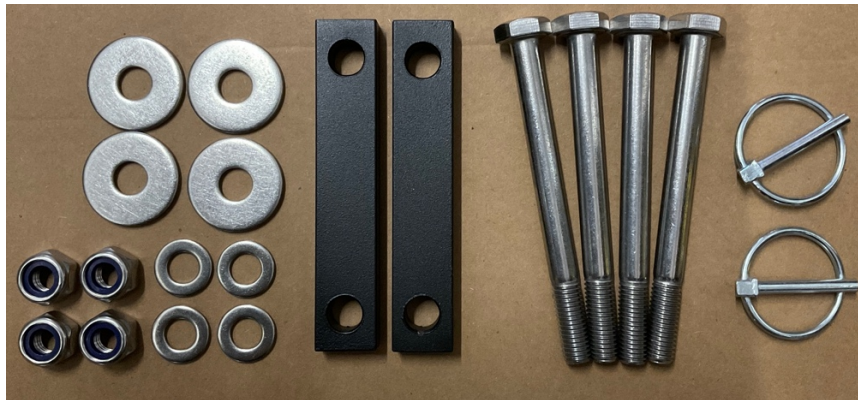

Installation:

- Temporarily hold the storage box in place on the chassis. For optimal protection the storage box should not extend past the bottom of the chassis rails.
- Mark the 4 pre-drilled holes in the storage box on the chassis.
- Set aside the storage box.
- Check the backside of the chassis rails to ensure a clean path for the drill bit. (On TDCI models the pre-drilled holes might interfere with the gearbox mounting bracket, in this case 2 additional holes need to be drilled in the storage box to get a suitable position, the non-used holes can be plugged using a 10mm grommet).
- Use a 10.5mm or 11mm drill bit and drill the marked holes through the chassis leg. Make sure that the car wiring loom inside the chassis is not damaged.
- The bolt is mounted from the inside of the box in the following order: bolt – small washer – mounting plate – storage box – chassis – large washer – nut
- Tighten the nut on the backside of the chassis until the bolt protrudes the locking nut. The nut shouldn't be overtightened since this might cause the storage box to warp.
- If the latches seem to be tight or loose, these can be adjusted by releasing the nut and turning in or out the hook until the clamping is tight.

- The locking pins can be installed through the hole on the latches to prevent accidental opening of the boxes during off-road driving. Additionally, a lock may be added for increased protection.

